


USE AND CARE GUIDE

OUTLET TESTER WITH GFCI

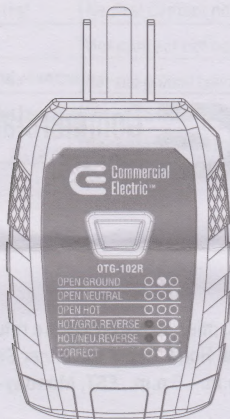

Questions, problems, missing parts? Before returning to the store,
call Home Depot Customer Service

8 a.m. - 6 p.m., EST, Monday-Friday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU





We appreciate the trust and confidence you have placed in Commercial Electric through the purchase of this GFCI Outlet Tester. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Commercial Electric!

Table of Contents

Table of Contents.....	2	Pre-Operation.....	3
Safety Information	2	Operation.....	4
Warranty.....	3		

Safety Information

SAFETY SYMBOLS

Symbol	Definition
	Indicates important safety information.
	Equipment protected throughout by double insulation or reinforced insulation.
	CONFORMS TO UL STD. 61010-1.61010-2-030 CERTIFIED TO CSA STD.C22.2 NO.61010-1.61010-2-030
	CONFORMS TO UL STD. 61010-1.61010-2-030
CAT II	(MEASUREMENT CATEGORY II) is applicable to test and measuring circuits connected directly to utilization points (socket outlets and similar points) of the low-voltage MAINS installation.

PRECAUTIONS



WARNING: BE EXTREMELY CAREFUL IN THE USE OF THIS DEVICE. Improper use of this device can result in injury or death. Follow all safeguards suggested in this manual in addition to the normal safety precautions used in working with electrical circuits. DO NOT service this device if you are not qualified to do so.



CAUTION: Read, understand, and follow the safety rules and operating instructions of this manual before you use the product. Protection provided by the instrument will be impaired if used in a manner not specified by the manufacturer. Before measuring hazardous voltages, first measure the voltage which is known to determine if the equipment operates correctly.



A GFCI (Ground Fault Circuit Interrupter) constantly monitors the electrical current passing through a circuit. If the amount of current passing into the circuit is different from the current being returned to the circuit, it indicates a ground fault and the GFCI shuts off electrical current to the circuit.



CAUTION: All appliances or equipment on the circuit being tested should be unplugged to help avoid erroneous readings.



CAUTION: This is not a comprehensive diagnostic tester. It is a simple tester used to detect most probable, common wiring conditions. Refer all problems indicated by the tester to a qualified electrician.



CAUTION: This tester will not indicate quality of ground. This tester will not detect two hot wires in a circuit. This tester will not detect a combination of defects. This tester will not indicate reversal of grounded and grounding conductors.



CAUTION: Make sure the GFCI receptacle is installed in accordance with the manufacturer's specifications.

Warranty

WARRANTY: 12 Months

For one year from the date of purchase, this product is warranted against any defects in material or workmanship. This warranty is void if this product is ever used while providing commercial services or if rented to another person. Contact the Customer Service Team at 1-877-527-0313 or visit www.homedepot.com.

Pre-Operation

PACKAGE CONTENTS




Part	Description	Quantity
A	Test plug	1
B	Test button	1
C	Indicator panel	1
D	Red indicator light	1
E	Yellow indicator lights	2

PRODUCT SPECIFICATIONS

Component	Specification
AC Voltage Range	125V AC, 50/60 Hz, 0.3W
Overload Voltage	CAT II 125V
Humidity	<80% relative humidity
Operating Temperature	32°F to 104°F (0°C to 40°C)
Storage Temperature	14°F to 122°F (-10°C to 50°C)
Altitude	<6560 ft. (2000 m), indoor use only
Dimension	65 x 44.7 x 27.2mm
Weight	Approx. 45g

Operation

- ☐ Ensure the tester operation by testing on a known live and correctly wired receptacle before operation.
- ☐ Insert tester into receptacle.
- ☐ If the tester indicates the receptacle is not wired correctly, please consult a qualified electrician.
- ☐ Compare the indicated lights (D and E) on the tester to the indicator panel (C) definitions printed on the tester.
- ☐ If the tester does not trip the GFCI, either the GFCI is not operating properly or the receptacle is miswired.
- ☐ This tester is also applicable with NON GFCI receptacle for wiring indication functions only.

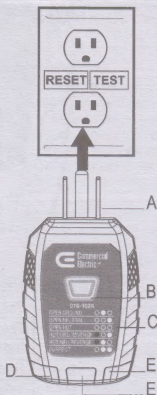

Operation (Continued)

INDICATOR PANEL DEFINITIONS



CAUTION: When testing in 2-wire (non-grounded) systems, the tester may indicate a faulty result.

Indicator	Fault	Reason for Wiring Fault
○ ● ○	Open ground	Ground contact not connected
○ ○ ●	Open neutral	Neutral contact not connected
○ ○ ○	Open hot	Hot contact not connected
● ○ ●	Hot/ground reverse	Hot and ground contacts reversed
● ● ○	Hot/neutral reverse	Hot and neutral contacts reversed
○ ● ●	Correct	Receptacle is wired correctly

○ RED

● YELLOW



Questions, problems, missing parts? Before returning to the store,
call Home Depot Customer Service
8 a.m. - 6 p.m., EST, Monday-Friday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.